


# Ten top tips


to keep your Contherm / Convap in tip top condition



- 1 Make sure that the operating conditions (temperatures and flow rates) comply with design specifications.
- 2 To start, turn on product flow, then Contherm / Convap rotor, then the media. Remember to turn on flush seal media if so equipped when starting the rotor.

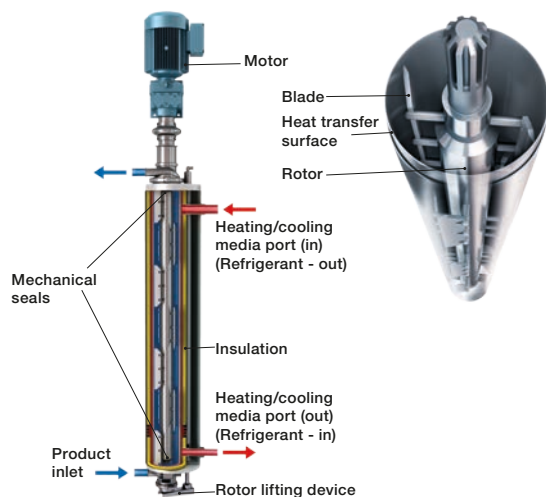

- 3 Dress scraper blades regularly to optimize heat transfer and protect cylinder.
- 4 Replace seal o-rings and inspect seal components, cylinder and rotor weekly or each time the system is opened for service.
- 5 Monitor equipment regularly for unusual vibration indicating bearing failure or motor misalignment.
- 6 Inspect and test hydraulic lifting device regularly, change hydraulic oil every six months.
- 7 Never operate Contherms when void of product, water or CIP solution and never leave CIP or product in system for extended periods.
- 8 Monitor effectiveness of CIP.
- 9 Maintain adequate stock and only use genuine Alfa Laval spare parts and services to achieve guaranteed performance, reliability and equipment life.
- 10 Maintain adequate stock and only use genuine Alfa Laval spare parts and services to achieve guaranteed performance, reliability and equipment life.

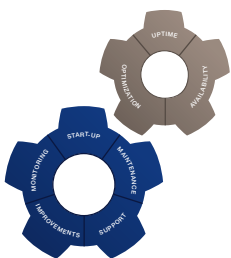

Extending performance  
with the Alfa Laval 360° Service Portfolio

